



## **OITU Series**

Optical Imaging Touch Screen Monitors

Setup Procedure for Two Touch and Gesture Operation  
on Windows 7

**Document No: OITU WIN7-A**

**General Notes:**

- Information in this document is subject to change without notice.
- All trademarks or registered trademarks are the property of their respective owners.
- Details provided are believed to be accurate, but no liability in respect of any information supplied is accepted by DisplayLite.

© 2010 DisplayLite Ltd



Displaylite Ltd

Huntingdon Business Centre

Blackstone Road

Huntingdon

Cambridgeshire

PE29 6EF

United Kingdom

Tel: +44 (0) 1480 455114

Fax: +44 (0) 1480 455124

Email: [info@displaylite.co.uk](mailto:info@displaylite.co.uk)



Web: [www.displaylite.co.uk](http://www.displaylite.co.uk)

## How to setup Optical Imaging Technology for Two Touch & Gesture Operation on Microsoft Windows 7

This document has been produced by DisplayLite to assist customers when setting up their Optical Imaging Touch Screen Monitor for Two Touch Operation.


First, insert the disk, provided by DisplayLite, into the CD Drive of the computer the touch screen will be running. Please note that the computer must be running Windows 7 Home Premium, Professional or Ultimate operating system to enable dual touch to work.

Now, plug in the touch screen to one of the USB ports on your computer.

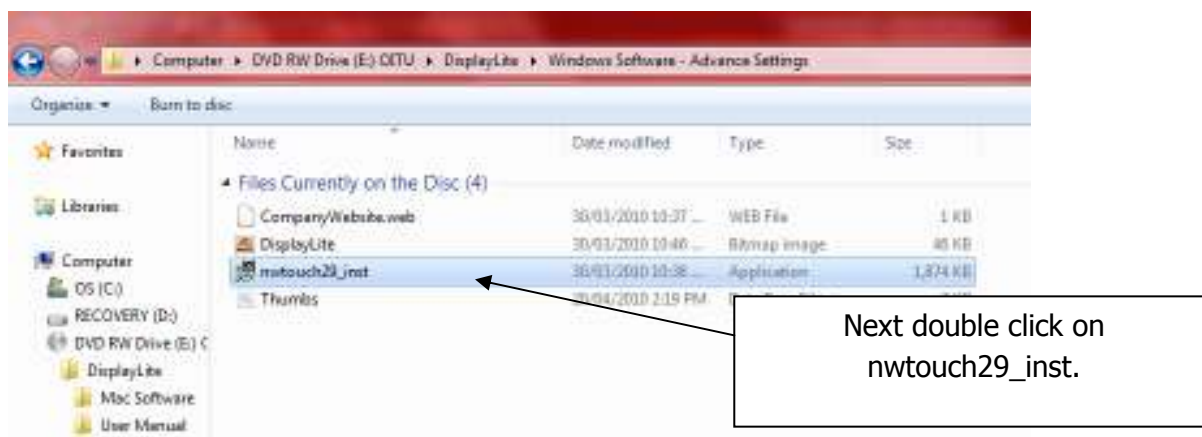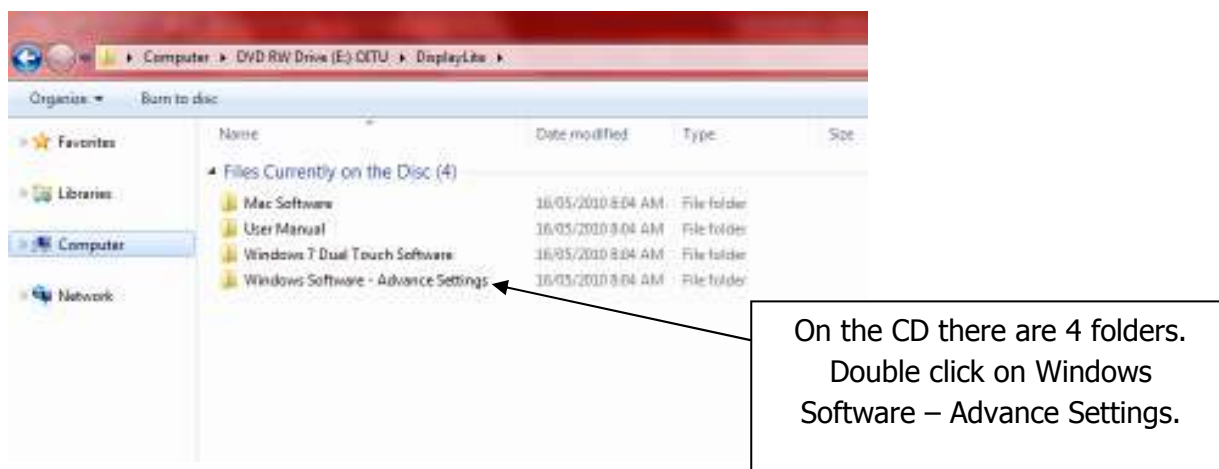





If agree with the end user licence agreement then click 'I Agree'

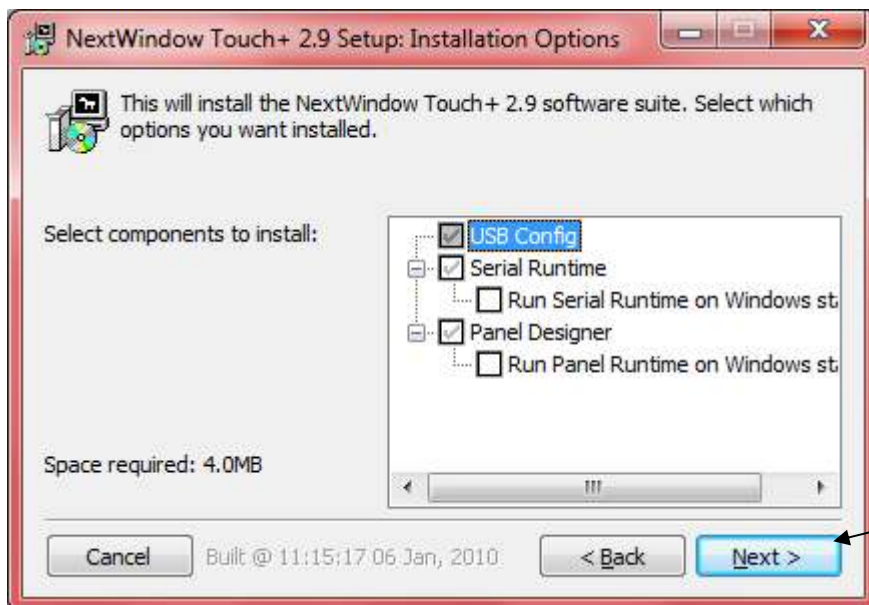


You are able to select which components of the program you wish to install. By Default USB Config is selected, so you need to press Next.

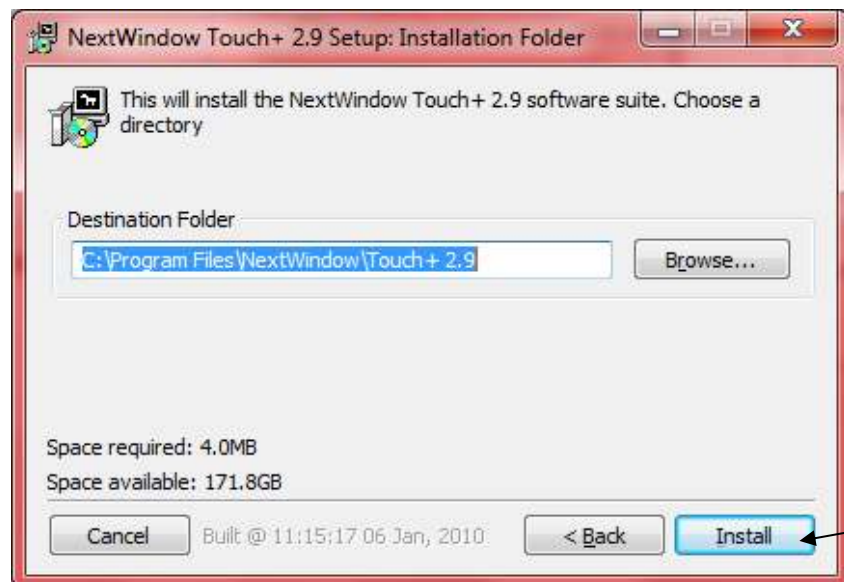

Now, you can choose which directory the software is installed to. By default this will go to your program files where all other installs are kept. Once you have chosen the destination folder, click Install.

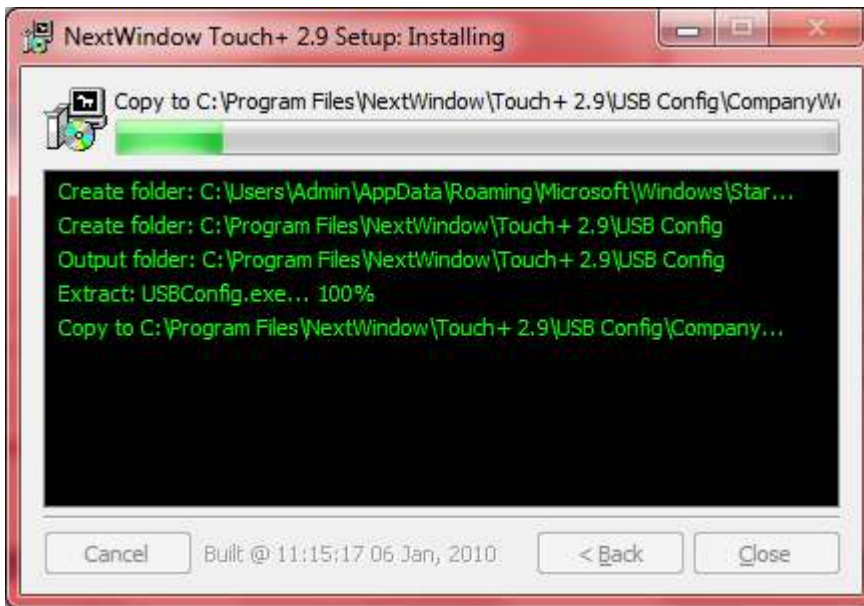


The program will now install.

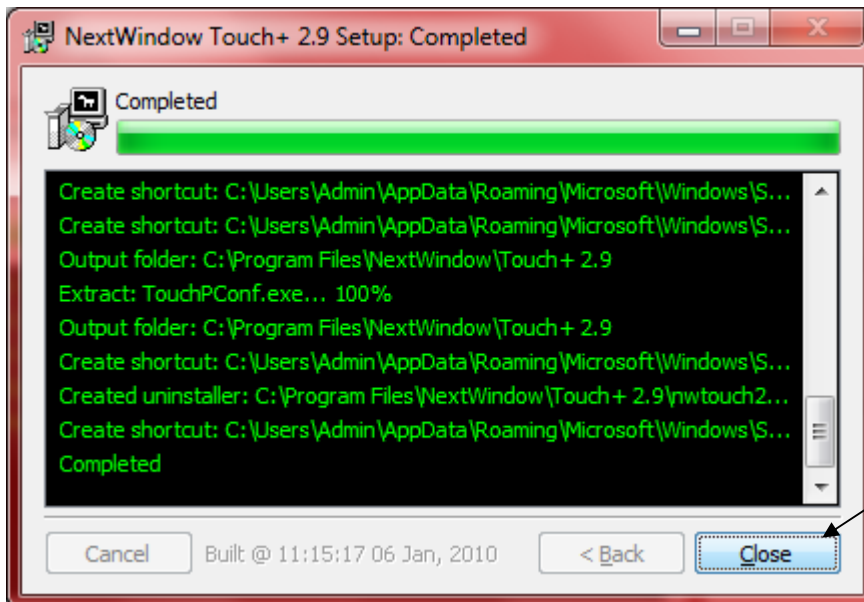


Once the program is installed, click Close.

Now you need to configure USB Config for use with multi touch.

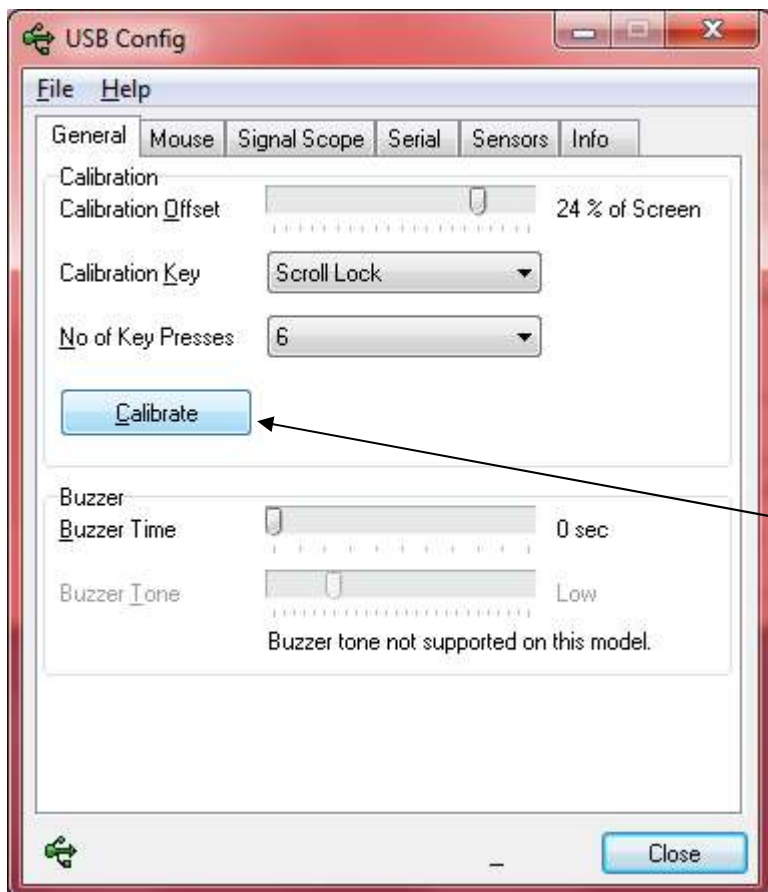


This is the USB Config program where you are able to use the advance settings on your touch screen display.

First, we need to calibrate the touch screen. To do this, click the Calibrate button. You will have to wait 3 seconds, and then the mouse pointer will move to the top left on the screen. You must touch the mouse pointer. Once you have touched the pointer, it will move to a different position. Please complete for the four calibration points.

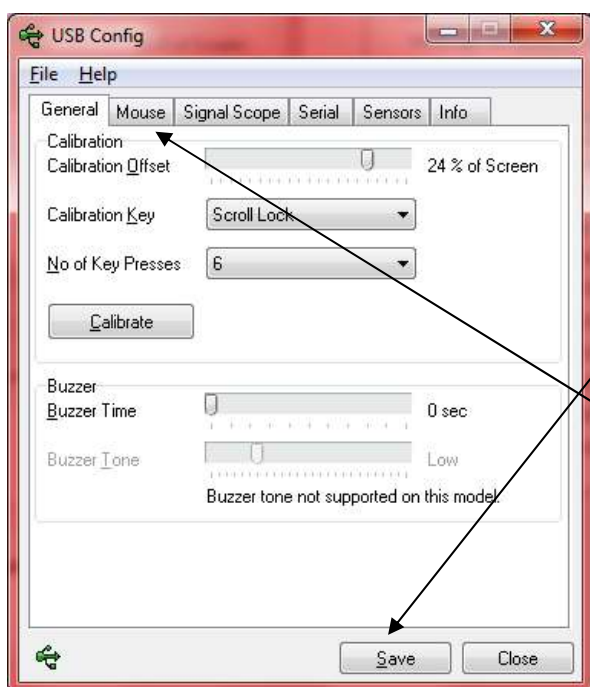

Once calibration has been carried out, click on Save.

Once you have saved the calibration, click on the Mouse tab.

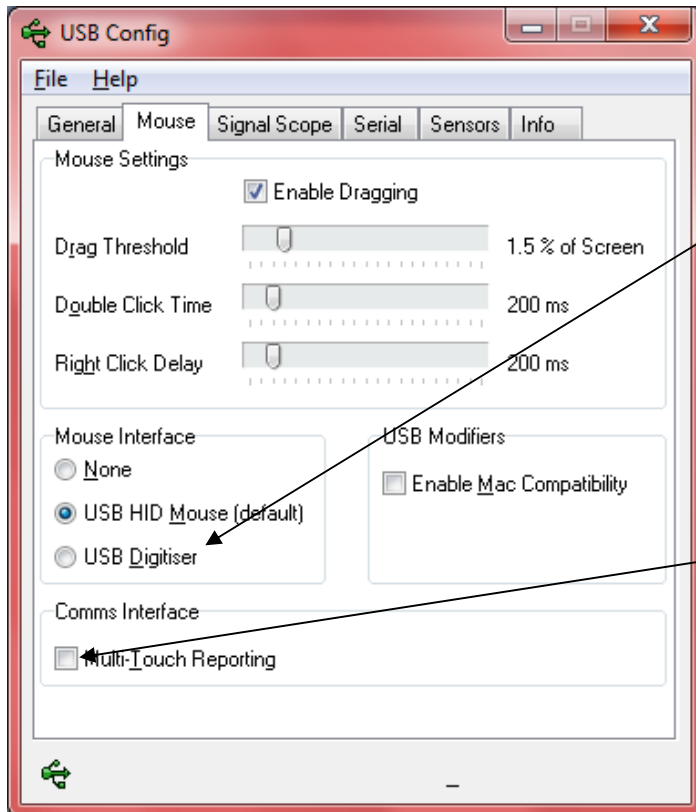


Now you need to setup the mouse interface to USB Digitiser. To do this, click the USB Digitiser box.


Also, you need to turn on multi touch reporting. To do this, click the Tick Box.

Now you must save these settings. By clicking File, then Save.


Once you have saved the settings, return to the software CD.

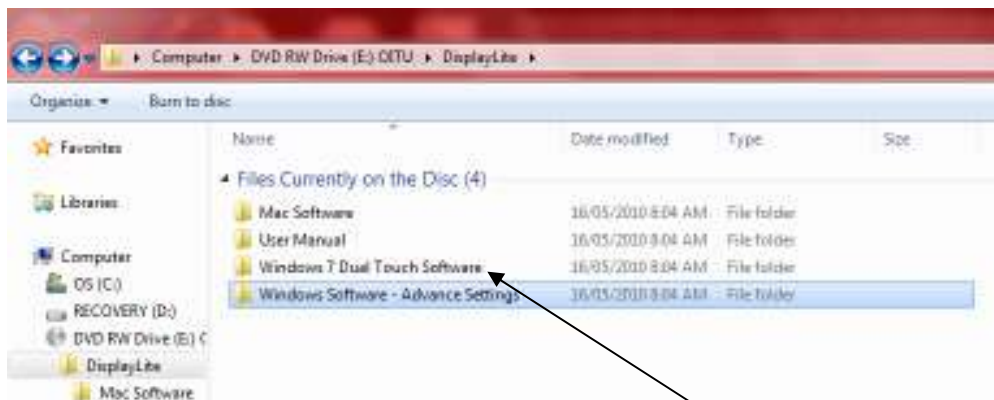

Now double click on the Windows 7 Dual Touch Software folder.

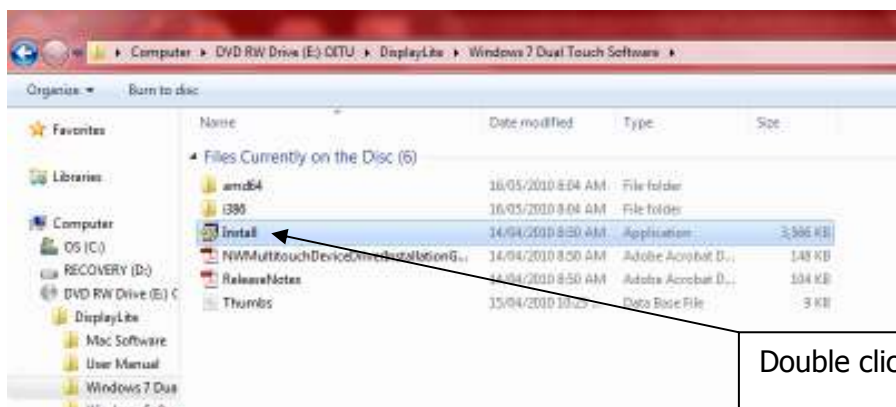


Double click on Install to start the installation.

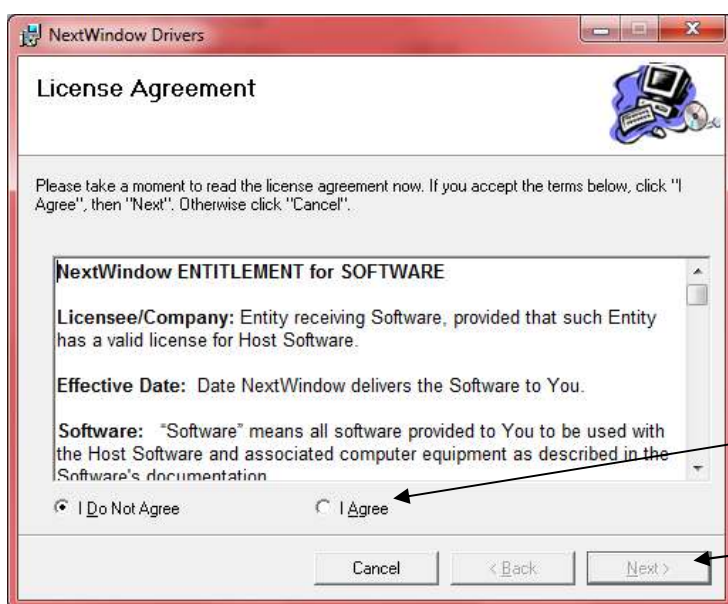


Please read the license agreement and click I agree.

Then Click Next.

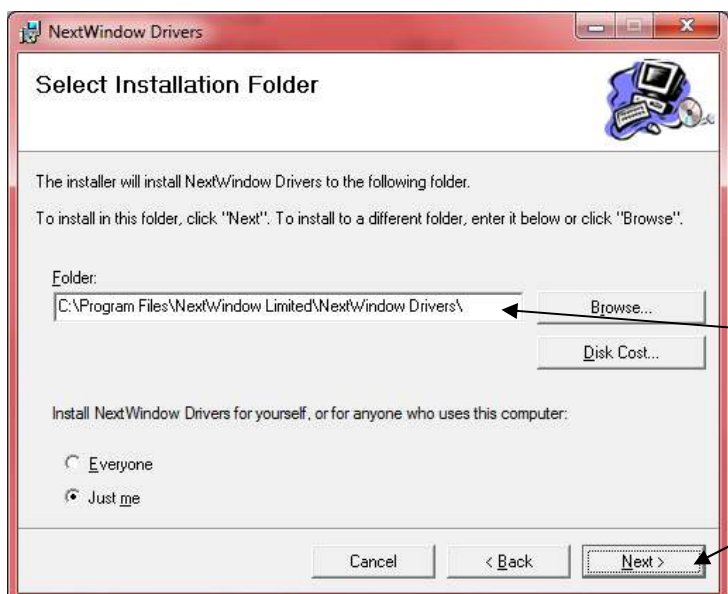

Now, choose a destination file for where the software will be saved to. By default the software will be saved to Program Files.

Once you have decided the destination file, press Next.

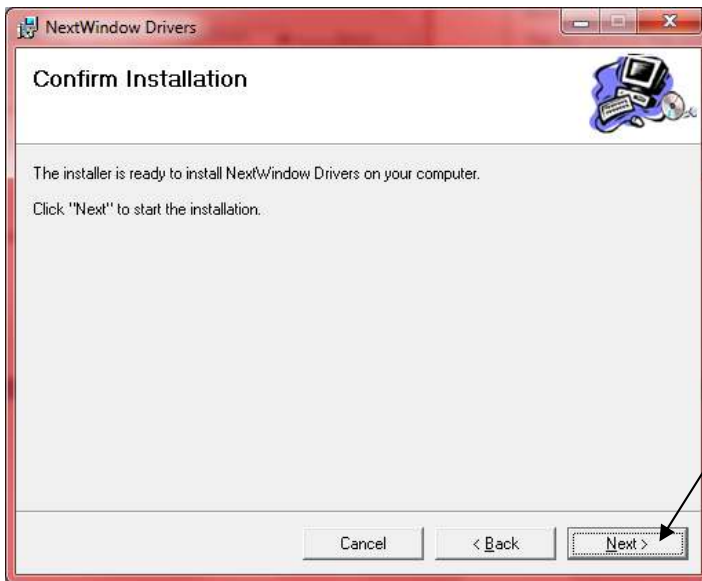

Press Next to Start the Installation.

The installation windows will automatically close when the installation is complete.

You will now need to install the two touch application which you wish to run with the touch screen.